 


XR6-30600-RF

Multi-Function LED Controller

Operation Instructions

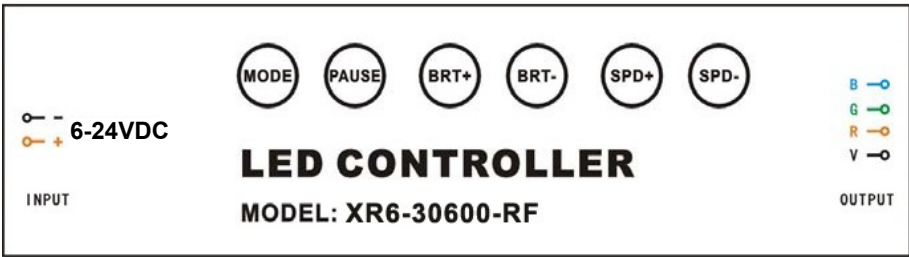 


- 【Mode】** : Change modes.
- 【Pause】** : Remain at present color; Press again to exit pause function.
- 【BRT+】** : Increases LED brightness level (Default is brightest).
- 【BRT-】** : Decreases LED brightness level (Default is darkest).
- 【SPD+】** : Increases speed level (Default is fastest level).
- 【SPD-】** : Decreases speed level.

Remote Key Descriptions

- 【Mode】** : Change modes.
- 【Pause】** : Remain at present color; Press again to exit pause function.
- 【SPD+】** : Increases speed level (Default is fastest level).
- 【SPD-】** : Decreases speed level.

Connection Instructions

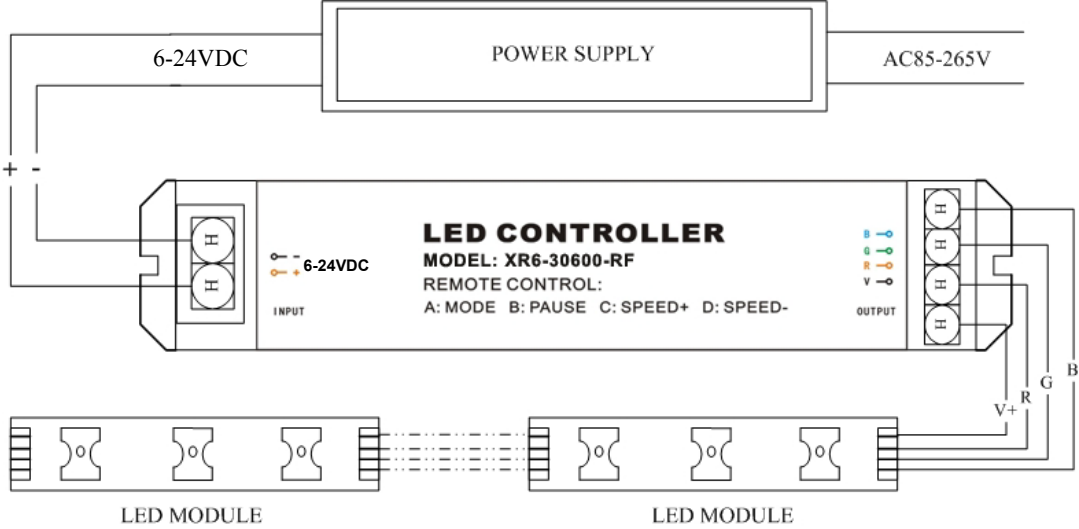

- #### Color Modes
- Mode 1: Slow Fading
 - Mode 2: Color Fading Learning Mode
 - Mode 3: Full-color Fading
 - Mode 4: Red/Green/White Jump
 - Mode 5: Loop Mode 2 and Mode 4




- #### Notes
- Controls various single-color modules and RGB full-color modules with common anode connections.

XR6-30600-RF

Multi-Function RGB Controller

Installation Instructions

 - (1) The input voltage should be limited to rated range.
- (2) Do not overload.
- (3) Need to install in dry environment.
- (4) If load wires are too long, they can be connected by ring connection method shown below.

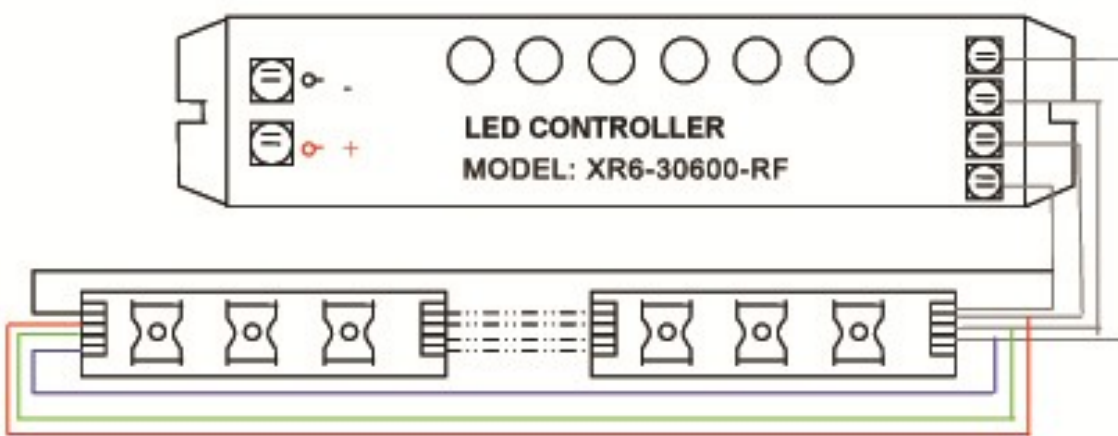

- (5) All loads have to be common anode modules.

Troubleshooting Guides

Problem	Reason	Solution
All lights are off with power on.	Power wires are not connected properly or no output from power switch.	Reconnect the power wires or change the power switch.
	Power cord is not connected properly	Reconnect the power cord.
Some color lights are off.	Power wires for these colors are not connected properly.	Reconnect the power wires.
Abnormal flicker when light are changing.	Wires are too long or there is a poor connection.	Shorten wires or add an amplifier.